

BMW M5 F90

SKU: BBCAIS007



Thank you for purchasing the Blackboost BMW M5 F90 S63 Cold Air Intake.

This Installation guide provides the instructions on how to how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Airbox	-	2
2. Filter Adapter	-	2
3. Covers	-	2
4. Standard Twin Flow BB Filter	-	2
5. Filter Clamps	-	2
6. Logo Plate	-	2



Compatibility

M5 (F90) – S63 4.4L V8 TT – (2017+)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex nut driver
2. 13mm, 18mm Spanners
3. Clip Remover

PPE




1. Gloves
2. Safety Glasses

OEM Intake Box Removal



Step 1

Using the clip remover, remove the retainer clips and remove the trim panels as shown below.

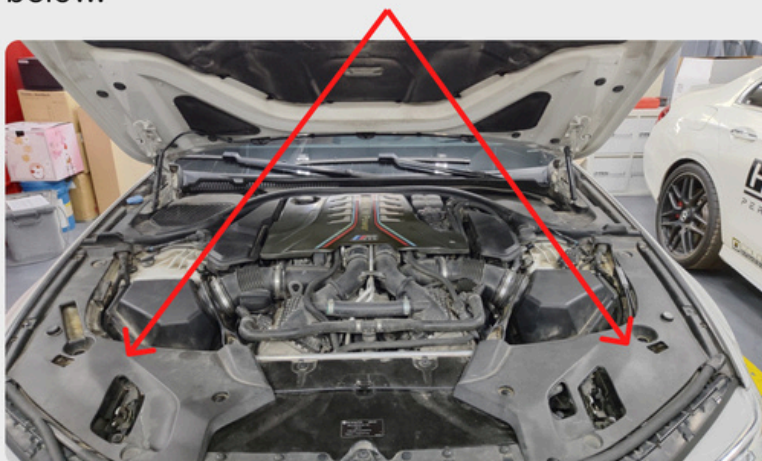

Step 2

Loosen the 2 bolts which are holding the strut brace as shown below.

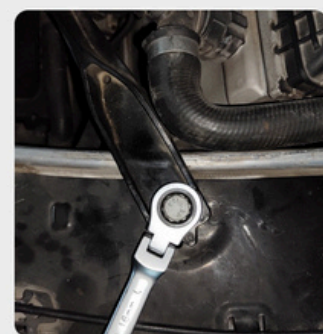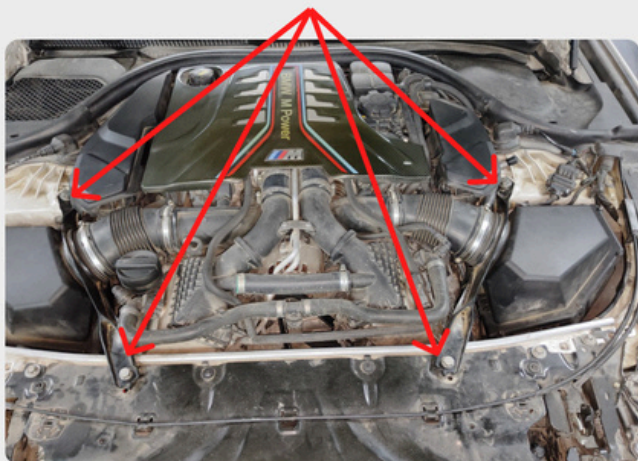



Step 3

Loosen the clamps on the Air box to disconnect the Air box from the pipe. Pull the pipe from the Air box as shown below.



Step 4

Pull out the Air box along with the strut brace.

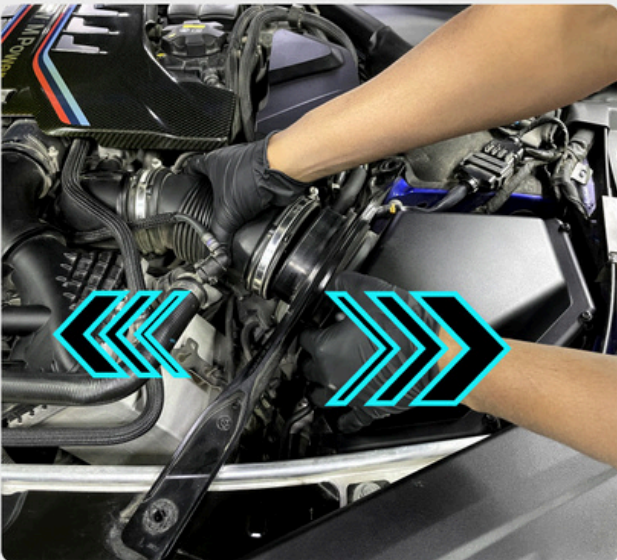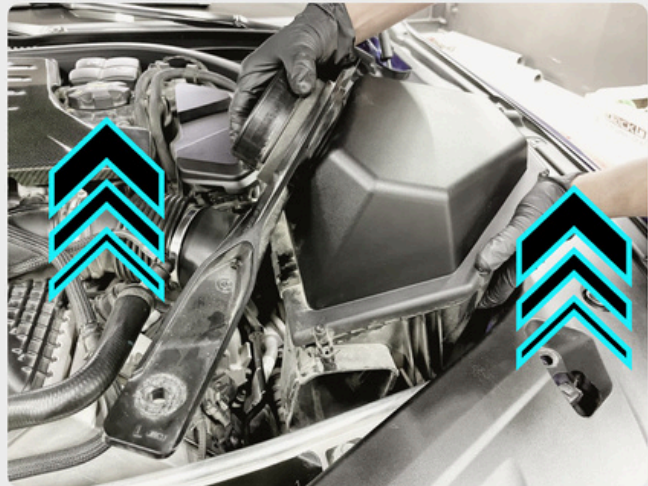

BlackBoost Cold Air Intake Installation




Blackboost Cold Air Intake Installation

Step 1

Place the BlackBoost Air box as shown in the below. Make sure to place the grommets appropriately as shown below.

Keep the duct above the bottom panel of the Air box.

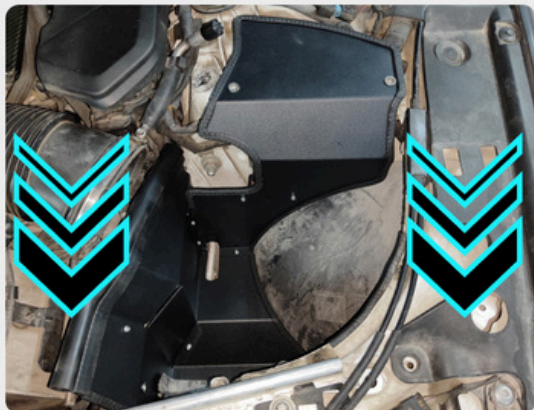

Step 2


Install the BlackBoost filter adapter to the BlackBoost filter and **hand tighten the clamp using the hex drive tool.**

(Only hand tighten it and take extra care to make sure you don't over tighten it)




Step 3

Assemble the BlackBoost filter adapter and the strut bace as shown below.

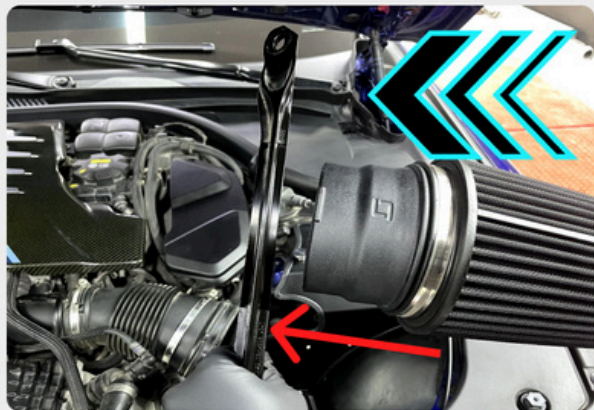

Then connect the OEM inlet pipe to the BlackBoost filter adapter as shown below and **hand tighten the clamp**.

(Only hand tighten it and take extra care to make sure you don't over tighten it)

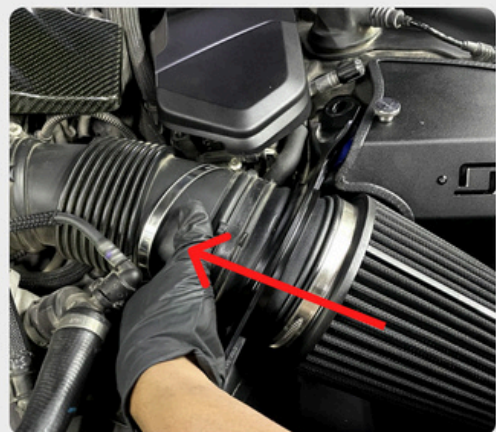

Step 4

Align the strut brace and tighten the bolt as shown below.



Step 5



Attach the logo plates to the BlackBoost Intake covers.



Step 6

Place the BlackBoost intake cover and tighten it with the thumb screws. Then, tighten the 3rd bolt as show in the picture.

Place the plastic trim panels and retain it with the plastic retainer clips.

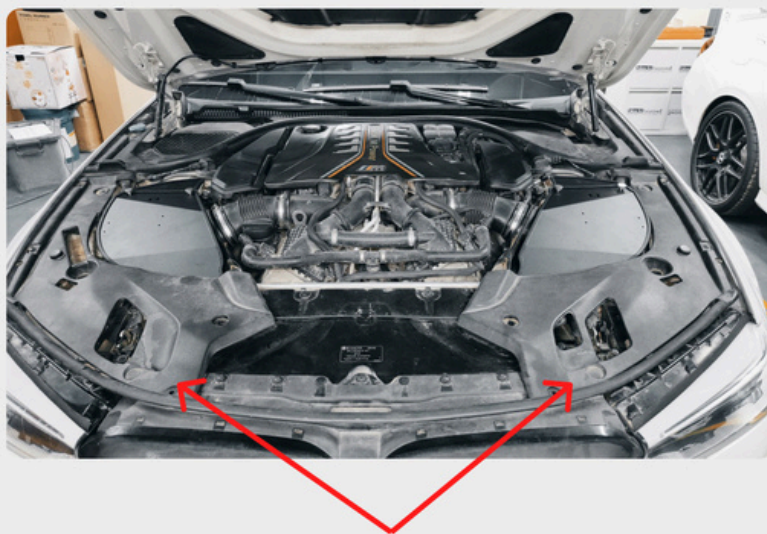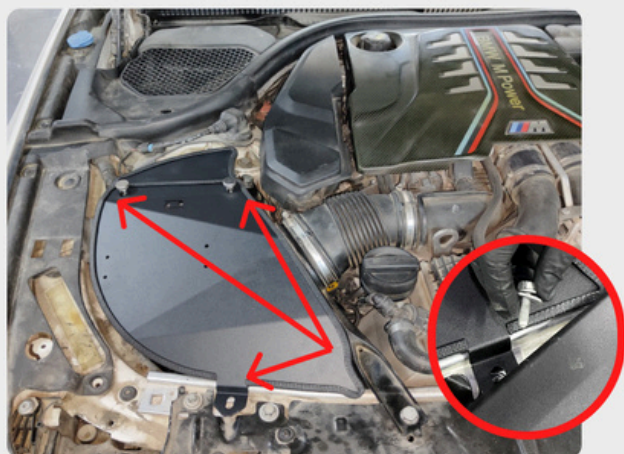



Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.