

Mercedes C200 M274 Cold Air Intake System

SKU: BBCAIS012



Thank you for purchasing the Mercedes C200 M274 Cold Air Intake System

This Installation guide provides instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Powder-coated Airbox	-	1
2. Engine Cover	-	1
3. Molded Composite Intake Tube	-	1
4. 4.3 -Inch High-Flow Synthetic Dry Air Filter with clamp	-	1
5. Standard Logo Plate	-	1



Compatibility

C180, C200, & C300 W205 M274 (2.0L I4) C-Class (2015-2018)
E200 & E300 W213 M274 (2.0L I4) E-Class (2017-2018)
GLC300 GLC Class M274 (2.0L I4) (2016-2018)
E300 E-Class M274 W212 (2.0L I4) (2016-2018)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex nut drivers
2. Flat head screw driver
3. Pry Tool
4. Hose Clamp Plier
5. Hook Pick

PPE



1. Gloves
2. Safety Glasses

OEM Air Box Removal

Step 1

Remove the OEM engine cover as shown below.



Step 2


Unlock and remove the OEM Inlet duct as shown below.






Step 3

Unclip and remove the sensor cable as shown below.

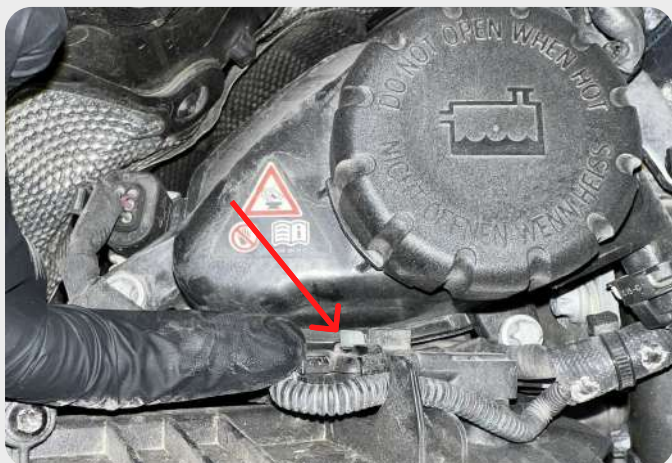

Step 4

Remove the clamp and the below shown screws to remove the top part of the OEM Airbox.

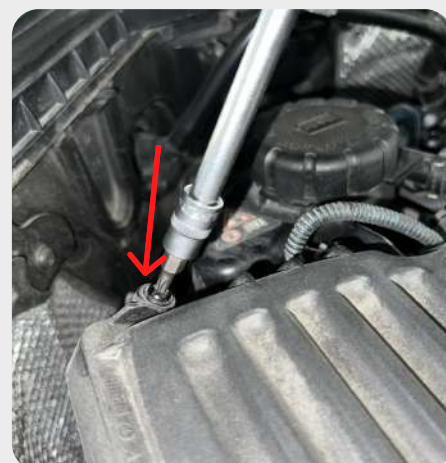

Step 5

Hold it from the OEM tube and remove the top part as shown below.




Step 6

Remove the below shown screw and remove the OEM airbox.



Pay attention to the grommet points when removing the OEM Airbox..
And then remove the below shown screw for later use.

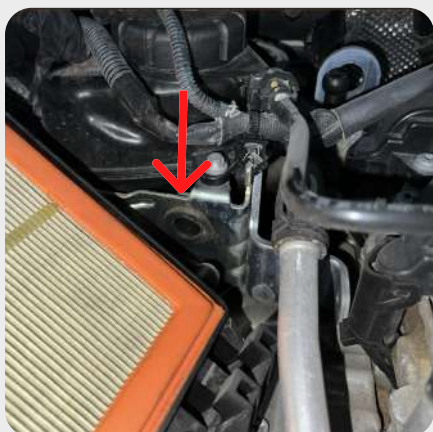

BlackBoost Cold Air Intake Installation



BlackBoost Cold Air Intake Installation



Step 1

Remove the rubber and insert it to the BlackBoost Airbox.



Step 2

Place the BlackBoost Airbox and ensure to insert the rubber along with the grommet as shown below.

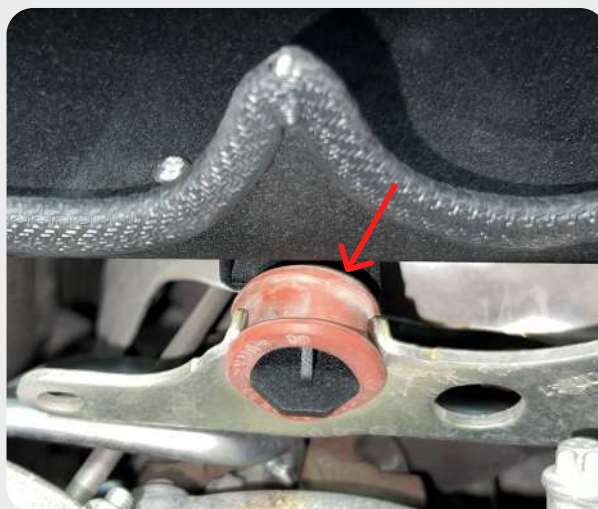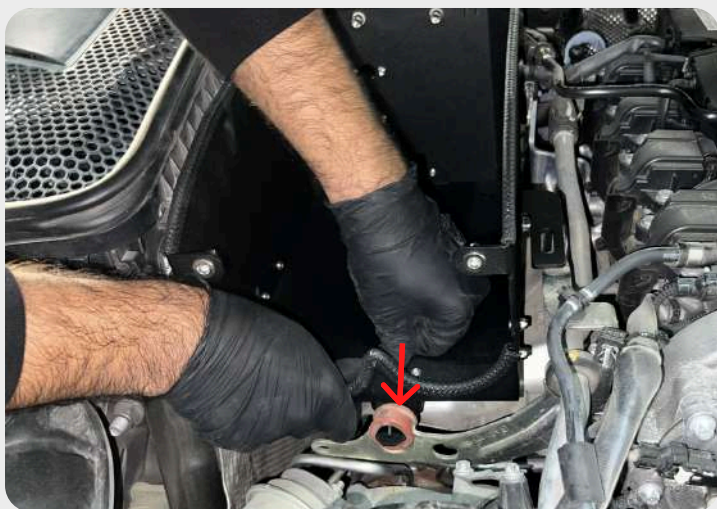

Step 3

Use the previously removed screws and tighten the Airbox.



Step 4

Tighten the below shown screw.



Step 5

Install the BlackBoost tube and filter as shown below.




Step 6

Tighten the clamp as shown below.




Step 7

Install the BlackBoost Airbox lid and tighten it using the thumbscrews.

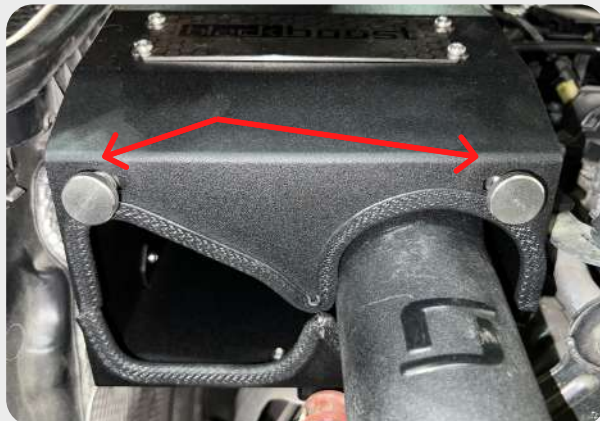

Step 8

Re Install the OEM Inlet duct in to the BlackBoost Airbox as shown below.

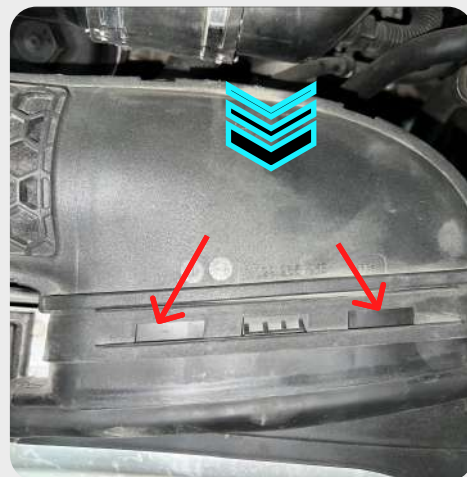

Step 9

Install the BlackBoost engine cover by locking the rubber in to the below shown grommet points.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.*