
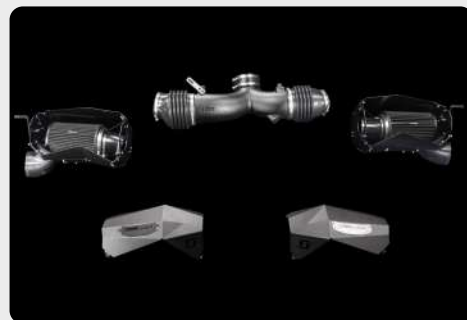
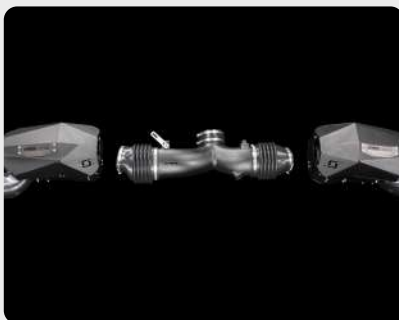


Range Rover SVR V8 Supercharged

SKU: BBCAIS018

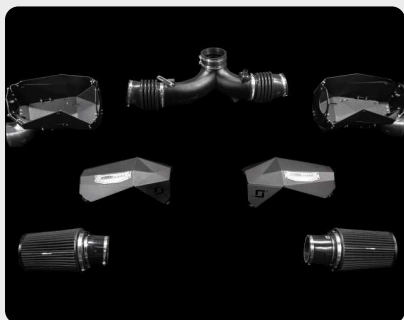


Thank you for purchasing the Range Rover SVR V8 Supercharged Cold Air Intake System

This Installation guide provides instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Powder-coated Airbox	-	2
2. Molded Composite Intake Tube	-	1
3. Molded Composite Intake Inlet Duct	-	2
4. Molded Composite Flexible connector	-	2
5. Molded Composite Coupler	-	1
6. Filter to MAF Wrapped silicone connector	-	2
7. 4.3 -Inch High-Flow Synthetic Dry Air Filter with clamp	-	2
8. 4.3" Velocity stack	-	2
9. Standard Logo Plate	-	2

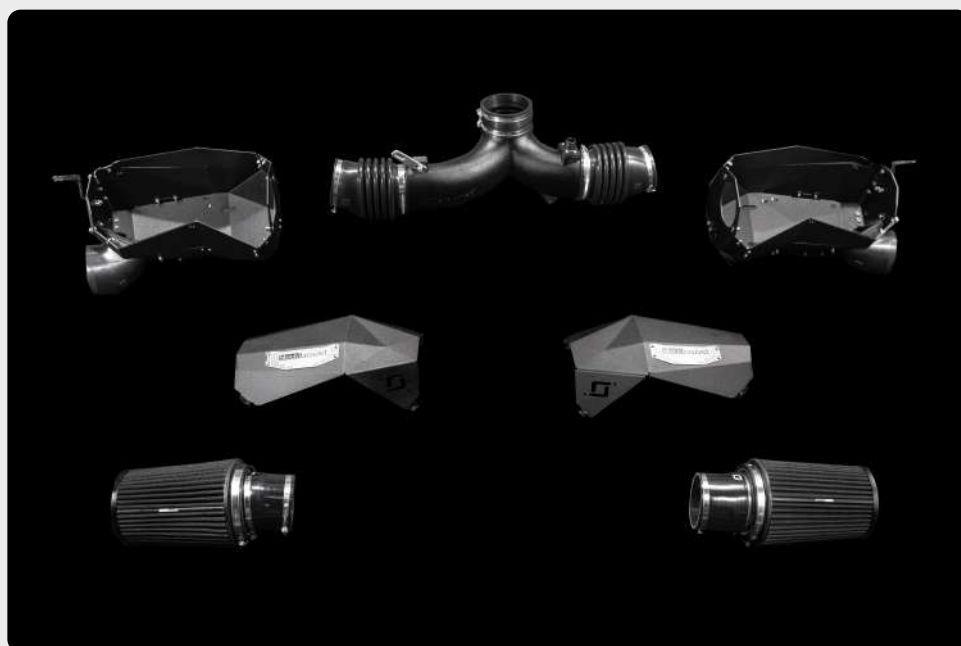

Compatibility

Land Rover Range Rover SVR - 5.0 L V8 Supercharged - (2015 - Present)
Land Rover Range Rover - 5.0 L V8 Supercharged - (2009 -2014)
Land Rover Range Rover Supercharged - 5.0 L V8 Supercharged - (2009 - Present)
Land Rover Range Rover Velar SVAutobiography - 5.0 L V8 Supercharged - (2019-2020)
Land Rover Range Rover Sport - 5.0 L V8 Supercharged - (2009 - 2015)
Land Rover Range Rover Sport Supercharged - 5.0 L V8 Supercharged - (2009 - Present)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex nut drivers
2. Flat head screw driver
3. Pry Tool
4. Hose Clamp Plier
5. Hook Pick

PPE




1. Gloves
2. Safety Glasses

OEM Air Box Removal


Step 1

Remove the OEM engine cover as shown below.

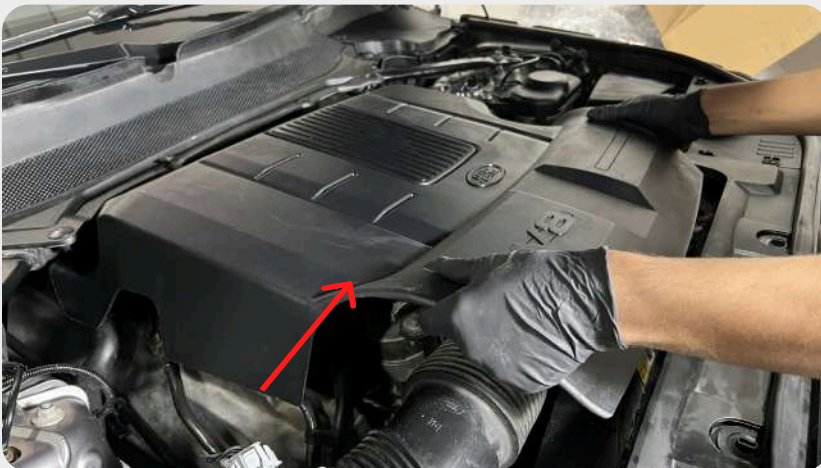



Step 2

Loosen the clamp and the nut as shown below to remove the OEM airbox. Then remove the clamp on the other side.

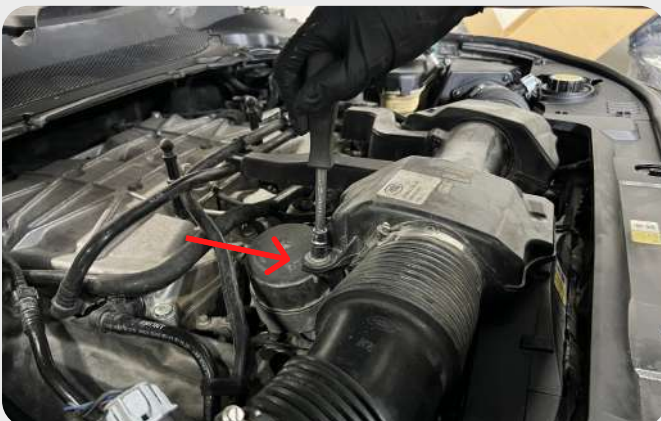



Step 3

Remove the clamp of the throttle body coupler.

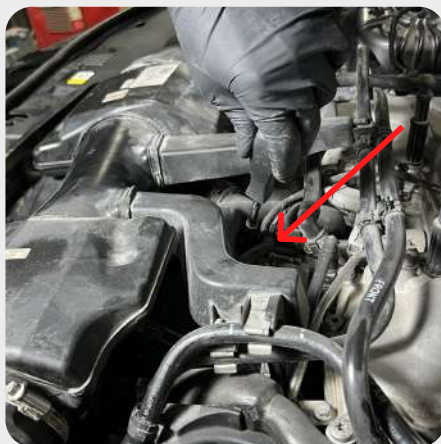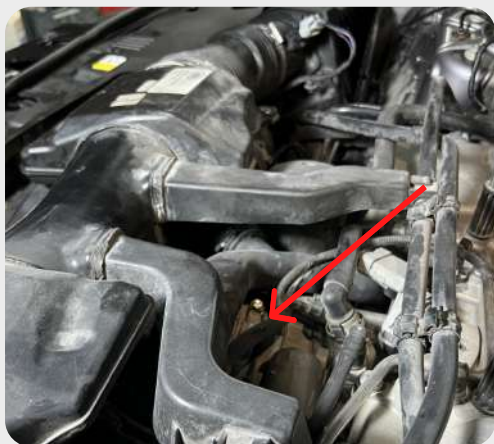


Step 4

Remove these lines as shown below.

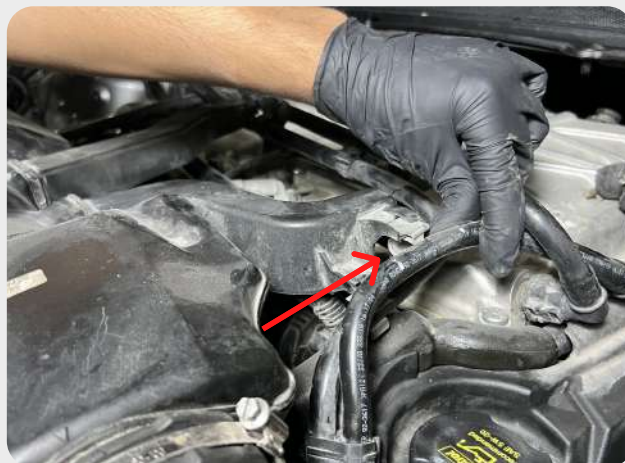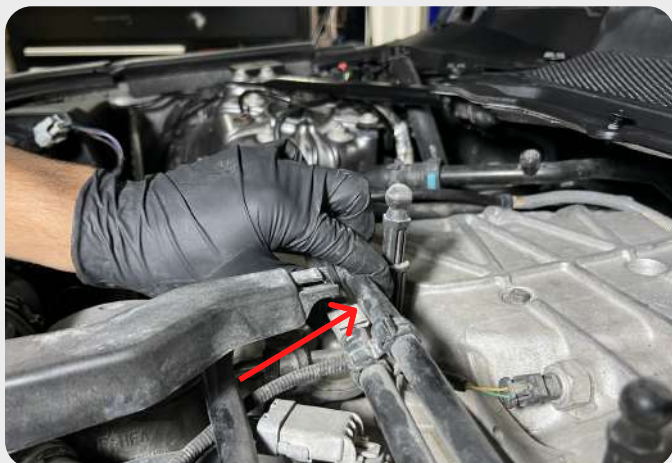

Step 5

Pull the OEM pipe as shown below and disconnect it.

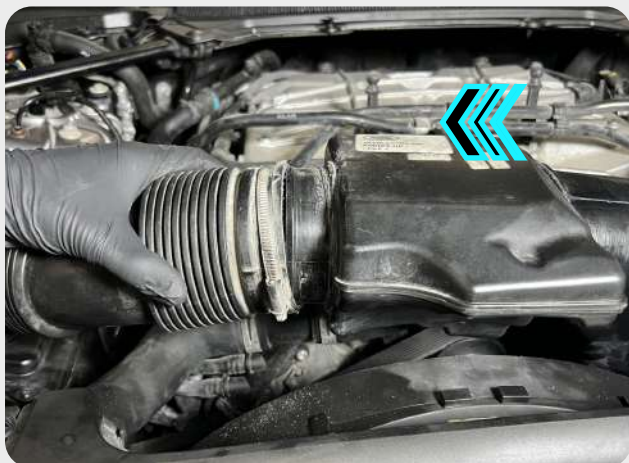



Step 6

Remove the breather hose.



Step 7

Slant and lift the throttle body connector as shown to completely remove it.

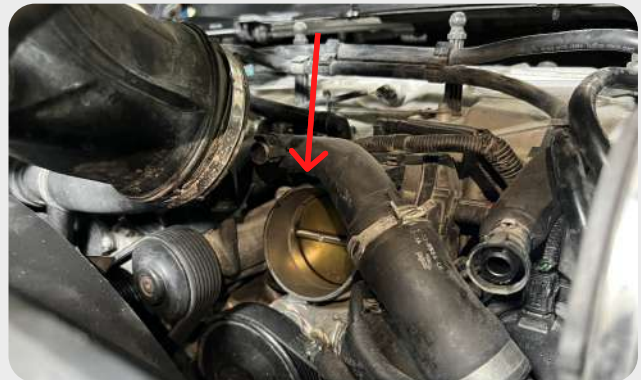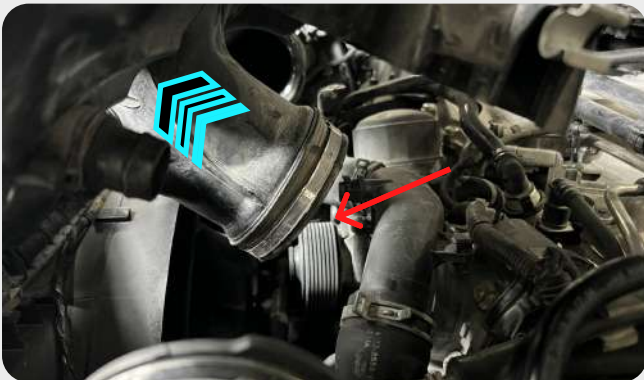

Step 8

Loosen the connector's clamps and remove the connectors on both side.




Step 9

Remove the MAF sensors.



Step 10

Pay attention to the grommet points and remove the OEM Airbox.

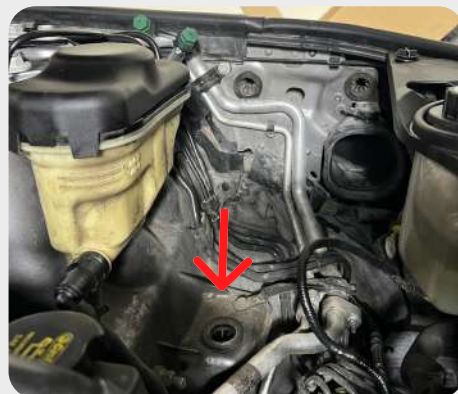

Unclip this cable on the left side before removing the Airbox.



BlackBoost Cold Air Intake Installation



BlackBoost Cold Air Intake Installation


Step 1

Install the BlackBoost tube along with the flexible connectors as shown below, Push towards to throttle body and lock the BlackBoost couplers firmly.



Step 2

Tighten the coupler clamps and install the bracket as shown below .

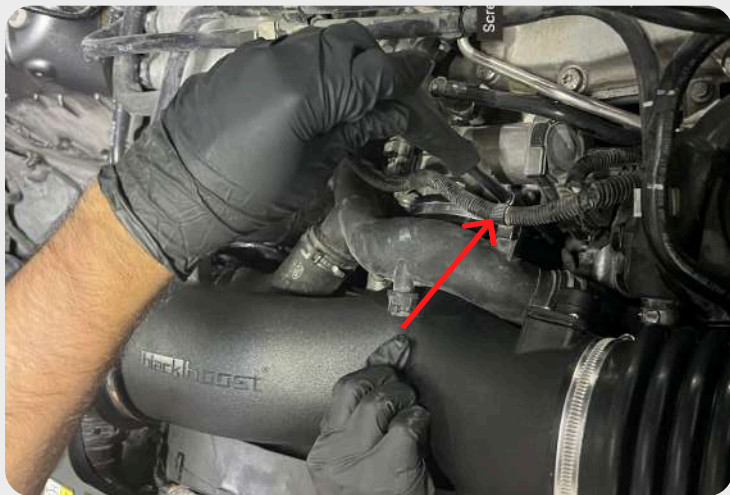

Step 3

Connect the below shown breather hose on to the right side of the tube.



Step 4

Remove the MAF sensor connector from the OEM Airbox and install it to the BlackBoost Airbox.




Step 5

Remove the below shown plastic cover for easy installation of the BlackBoost Airbox.




Step 6

Place the BlackBoost Airbox and install as shown below.

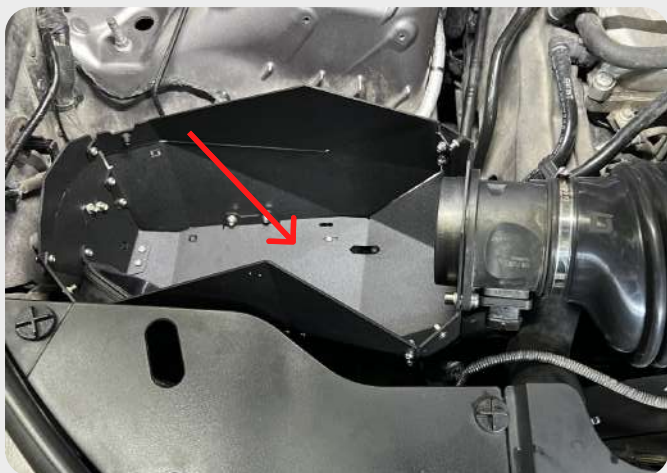

Step 7

Ensure to install the duct as shown below.

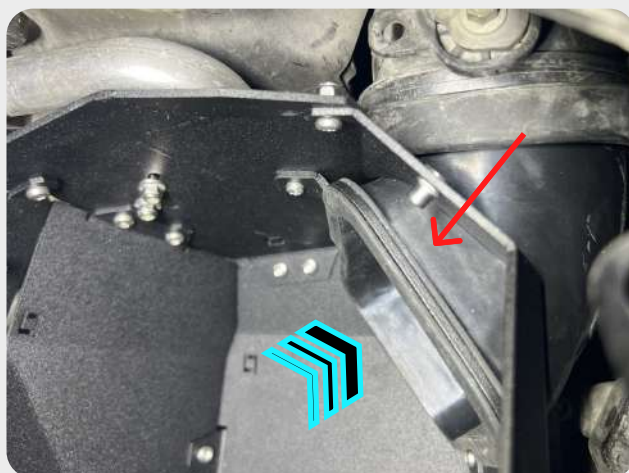


Step 8

Tighten the clamps as shown below.



Step 9

Connect the sensor Cables as shown below.

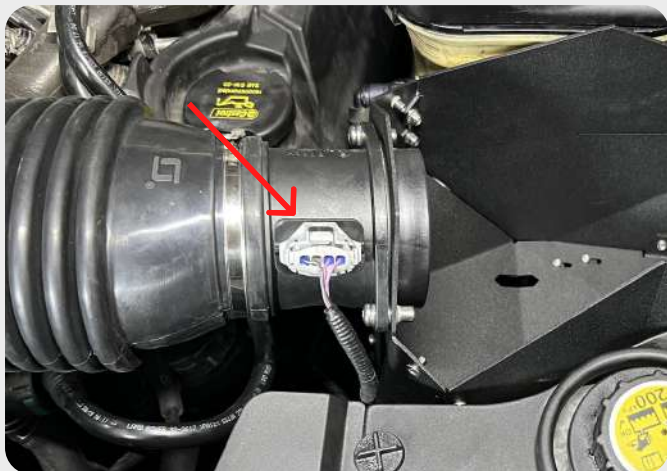

Step 7

Install the BlackBoost filter along with the silicone connectors as shown below.




Step 8

Tighten the clamps as shown below.



Step 9

Close the Intake lid and use the thumbscrews and tighten it.

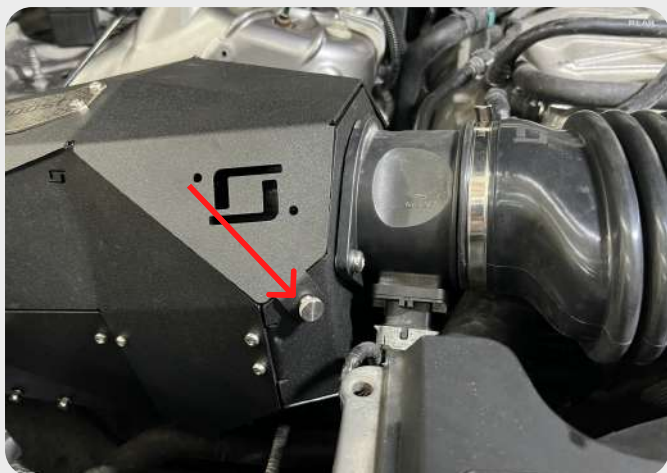


Step 10

Close the plastic cover.



Step 11

Finally install the engine cover.

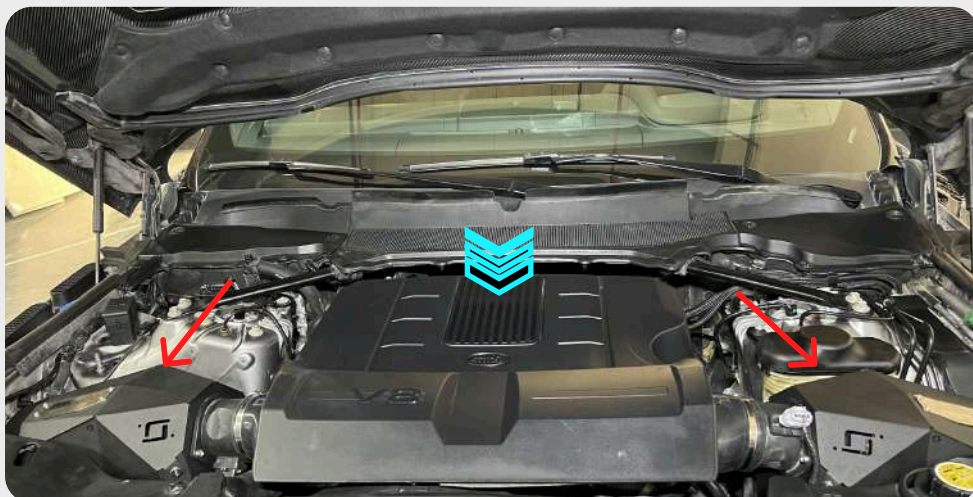



Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.*