


Ford Ranger Raptor FTA

SKU: BBFTA006

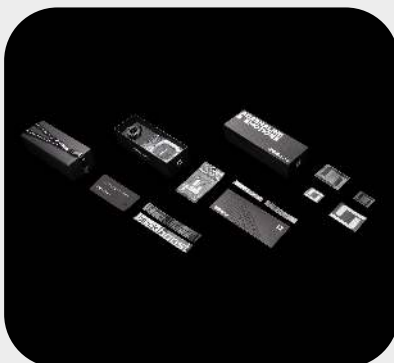

Thank you for purchasing the BlackBoost Ford Ranger Raptor FTA

This Installation guide provides instructions on how to install the Blackboost FTA Adapter and the tools required.

Content of the Package

1. FTA	-	1
2. Screws	-	3



Compatibility

Ford Bronco (U725) – 2.3L EcoBoost I4 Turbo – (2021+)
Ford Bronco (U725) – 2.7L EcoBoost V6 TT – (2021+)
Ford Bronco (U725) – 3.0L EcoBoost V6 TT – (2023+)
Ford Ranger Raptor (P703) – 2.3L EcoBoost I4 Turbo – (2023+)
Ford Ranger Raptor (P703) – 2.7L EcoBoost V6 TT – (2023+)
Ford Ranger Raptor (P703) – 3.0L EcoBoost V6 TT – (2023+)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. 7mm hex nut driver.
2. 8mm hex nut driver.

PPE



1. Gloves
2. Safety Glasses

Step 1

First remove the clip connected to screws of the diverter-valve as shown below.



Step 2

Unscrew all 3 screws to remove the divert-valve as shown below.




Step 3

Place the BlackBoost FTA in between the diverter-valve using the BlackBoost screws,



Step 4

Install the FTA as shown below and then tighten all 3 screws and place the clip as shown below.

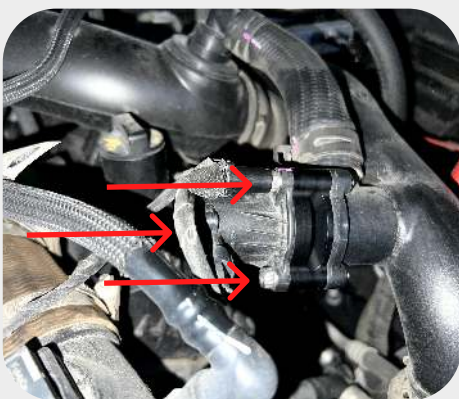



Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components, or yourself. Please be aware of local laws and regulations before installation.*