


Land Rover Defender P400

SKU: BBFTA009

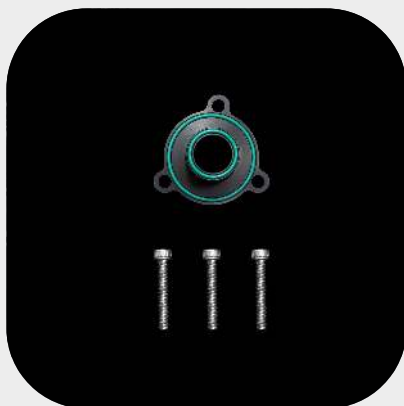

Thank you for purchasing the Blackboost Land Rover Defender 3.0L P400

This Installation guide provides instructions on how to install the Blackboost FTA Adapter and the tools required.

Contents of the Cold Air Intake Packaging

1. FTA	-	1
2. Screws	-	3

Compatibility

Defender (L663) 90/110/130 - P300 2.0L I4 TURBO - (2020+)

Defender (L663) 90/110/130 - P400 3.0L I6 TURBO - (2020+)

Defender (L663) 90/110/130 - P600 5.0L V8 S/C - (2020+)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. 7mm hex nut driver.
2. 8mm hex nut driver.
3. Small flathead screwdriver (3mm).

PPE



1. Gloves
2. Safety Glasses


Step 1

First remove the engine cover as shown below.



Step 2

Unplug the diverter valve cable as shown below.

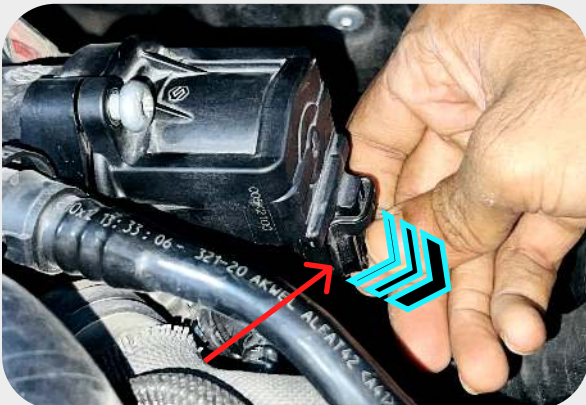

Step 3

There are 3 screws on the diverter-valve. Unscrew all 3 screws to remove the diverter-valve.




Step 4

Place the BlackBoost FTA on to the diverter-valve as shown below. Rotate and make sure to align the screw holes of the BlackBoost FTA with the diverter-valve screw holes.



Step 5

Install the BlackBoost FTA along with the diverter-valve and tighten all 3 screws as shown below.

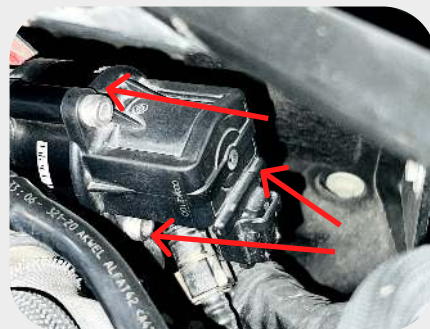

Step 6

Plug and connect the cable as shown below.



Step 7

Finally close the engine cover.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components, or yourself. Please be aware of local laws and regulations before installation.*